

USTAND Assembly Instructions

(Rev. 1 dd 18/05/2022)

USTAND consists of two parts, the waste holding tank and the top cover which must be assembled one above the other.



USTAND is designed to be moved by forklift thanks to the fork insertion guides under the waste collection tank.

To secure the waste holding tank and the top cover together, simply snap the two metal rods in the appropriate holes (as shown in the pictures below); the rods can be locked with padlock.



The screw cap allows suction of the contents without disassembling the free standing urinal.

For further info, contact:

ARMAL S.p.A. Unipersonale
Società soggetta a direzione e coordinamento di Ylda S.p.A.
Via Fiorentina, 109 - 50052 Certaldo (FI) - Phone +39 0571 665305 - Fax +39 0571 651260
armal@armal.biz - info@cert.armal.biz - www.armal.biz