


ASSEMBLY ISTRUCTIONS SQUAT RECIRCULATING



Prepare the base of bathroom.

Drill the base into the marked zone (see photo on the left)



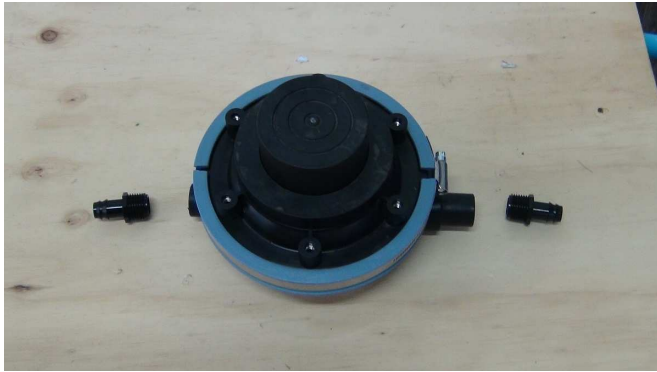

Prepare the foot pump.
Tighten junctions in the pump.



Insert pump in the base (attention of
flow direction)
Fix the pump with the screws.



Assemble the filter with junction and counterweight.




Assemble one flex tube at filter.

Assemble the flex tube with filter in aspiration of the pump.



Assemble the other flex tube in
expulsion of pump.

Place the two tube in the corner of
the base.

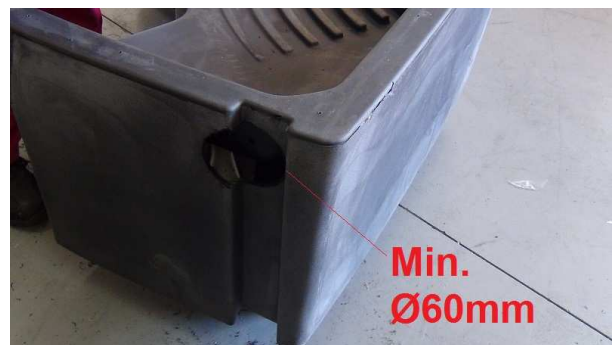

Drill the Squat in this position (hole
min. 60mm).

Insert the squat in the base of
bathroom.



Attention that the two flex tube are not mashed.

Insert the two tube in the hole and place the filter in squat bottom.



Prepare the squat cap.

Fix the right bracket with two rivet (see the photo)



Fix the left bracket with two rivet (see the photo)



Insert one nozzle into the predisposed hole and fix with the ring.

ATTENTION : insert the gasket before fixing.



Insert other nozzle into the predisposed hole and fix with the ring.

ATTENTION : insert the gasket before fixing.

ATTENTION : check the flow direction of nozzles (see photo)



Assemble this four components.



Insert this block in the nozzle positioned in head of the cap.

Insert the curve connection in the nozzle positioned in tail of the cap.



Connect this two junctions with the flex tube.



Prepare the paddle

Assemble the paddle and counterweight with screw.



Insert the paddle into the hole of the brackets (insert at pression).





Assemble the hinge at the cap with two rivets.



Fix the free tube at the connection of the cap, and position the cap into the squat.



Drill the Squat and Fix the hinge with two rivet.



Complete the assembly with calibration of the hinge.

Operate on the central screw of hinge is possible to regulate the angle required to open the cap for clean the squat.

Close the cap and use.

